

## Maintenance

As good as new finish can be maintained by following these guidelines:

- Dry out the tray fully after every use, to avoid build-up of limescale and soap residue.
- Clean the shower tray regularly using a damp cloth or sponge, followed by a soft dry cloth.
- Occasionally use a non-abrasive cleaner to remove stubborn stains.

## 1. Warranty: Limit of Responsibility

- 1.1 The Company warrants that it will (at the Company's choice) either repair or replace, or refund the full purchase price of any goods which are accepted by the company as being defective or not in accordance with the contract or any express description or representation given or made by or on behalf of the Company in respect of the goods within a period 25 years from despatch of such goods from the Company's works ('the warranty period') save that this warranty shall not apply where the defect or fault is attributable to defective materials supplied by third parties where the customer's only remedy will be against that third party or where the defect or fault is attributable to the goods not being installed or maintained in accordance with the Company's installation and maintenance instructions. The Customer's remedies in respect of any claim under the foregoing express warranty or any condition or warranty implied by law or any other claim in respect of the goods or any workmanship in relation thereto (whether or not involving negligence on the part of the Company) shall in all cases be limited to repair, replacement, reperformance or refund of the purchase price as aforesaid and any condition or warranty implied by law shall cease to apply after damages, compensation, costs, expenses, losses or other liabilities, whether direct or consequential, and any other remedy which would otherwise be available in law in hereby excluded except to comply with the specification or in respect of any delivery or installment of any order or any part thereof shall not entitle the Customer to cancel or refuse delivery of or payment for any other order, delivery or installment or any part of the same order, delivery or installment.
- 1.2 Where the company is called out in respect of allegedly defective goods but declines to accept the goods are defective, the Company reserves the right to make a charge in respect of that visit.

## INSTALLATION INSTRUCTIONS

### INSPECTION

Please read carefully. Check your tray before installation.

### CHECKLIST

- Check shower tray dimensions.
- Check shower enclosure dimensions with shower tray dimensions.
- Check for defects on the shower tray.
- Check for any transit damage.

**Please note:** The above procedure should be made prior to installation. The fitting of this tray will be seen as acceptance of quality. No responsibility will be accepted unless these instructions are followed.

**IMPORTANT:** We recommend Top Access easy clean wastes. Wastes should be fitted following waste trap supplied instructions. DO NOT OVERTIGHTEN.

If this shower tray is installed in conjunction with a steamer, the steam outlet must be at least 300mm from the top of the shower tray.

## JTULTRACAST® Installation Instructions


Instructions must be adhered to, as the manufacturers will not accept responsibility for incorrect installation.

- Before installation, prepare a rigid base of concrete or marine ply with suitable recess or cut out for the waste.
- Cover the base with a layer of weak cement mix (Sand/cement ratio 5:1). Or alternatively cement based tile adhesive.
- Place shower tray with waste fitted on the prepared cement bed, check for level and allow to set.
- Finally, connect waste fitting and check for leakage. See examples **A** and **B** for fitting and **C** for finish.

Ensure tray is level and drains correctly. The shower tray has been designed with a built-in fall to allow correct water drainage.


**NO RESPONSIBILITY WILL BE ACCEPTED UNLESS THESE INSTRUCTIONS ARE FOLLOWED.**

a) Straight onto the floor

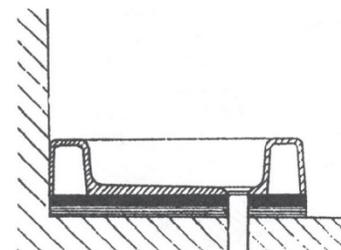


b) Raised Application

Make sure the distance between the struts is sufficient to accommodate the waste trap depth.

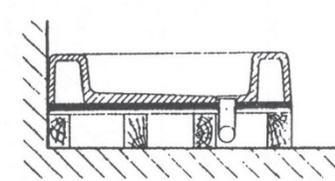

c) Finish



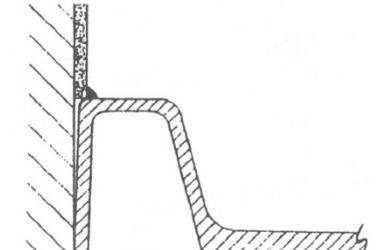


**Important:** This product must be bedded on a weak 5:1 sand/cement mix on a solid base of either concrete or marine ply in all installations. This smoothes out any undulations between the floor and the tray base.

To prevent the possibility of water damage, check all connections are watertight and that the tray is adequately sealed along the tiling line.

## Installation Instructions

- a) Carefully unwrap your shower tray.
- b) Lay the tray face down on a dust sheet.
- c) Fix the legs into the inserts incorporating the panel clips as shown in diagrams 1 & 2.

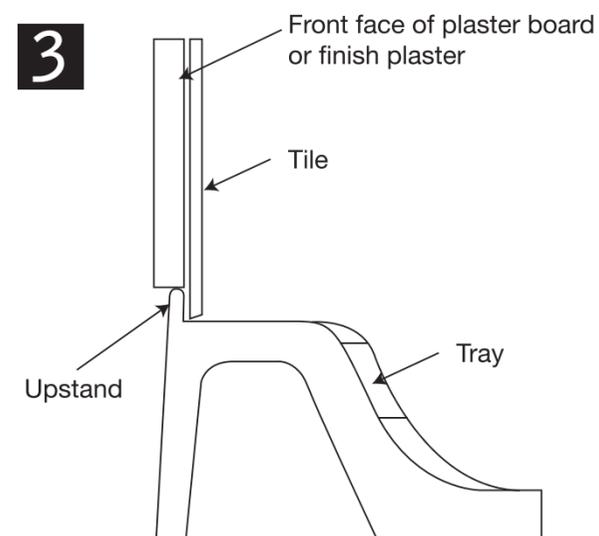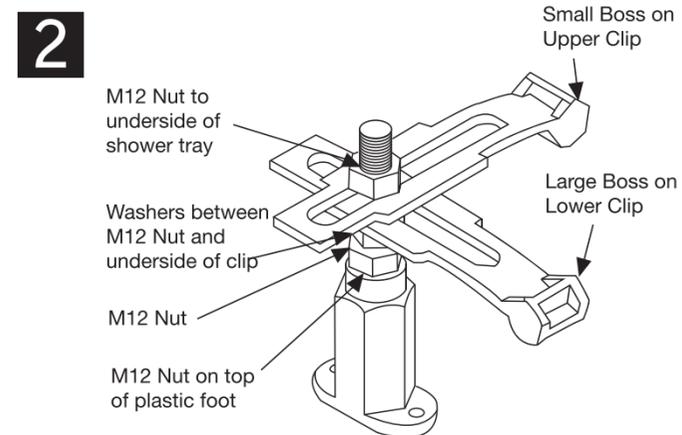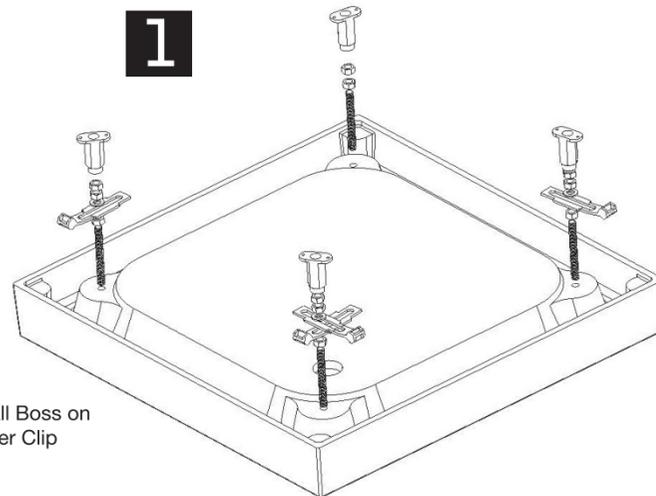

Note: The above diagram (3) applies to JT Merlin Upstand shower trays only

- d) Position the tray in situation and level to the correct height as shown in diagram 4.
- e) When using upstand trays mark the wall and chase into the plaster as shown in diagram 3.
- f) Make all plumbing connections, screw down accessible legs and remove the protective film.  
At this point a dust sheet or other protection in the tray base is required.
- g) Commence tiling.

h) After the tiling and grouting is completely dry (approx 24 hrs), silicone sealant can be applied to the joint between the tray and the tiles as shown in diagram 4.

i) The panels can then be fitted into the retaining clips. A small batten (not supplied) should be fitted to locate the base of the panel, to prevent the panel bottom pushing in as shown in diagram 4.

